



[Knowledgebase](#) > [Smartwatches](#) > [Reebok Stride Troubleshooting and Information](#) > [Charging & Battery](#) > [How to Use Power Saving Mode on Your Reebok Rush](#)

How to Use Power Saving Mode on Your Reebok Rush

Inas B. - 2026-09-18 - [Charging & Battery](#)

Power Saving Mode helps extend battery life by limiting the watch to essential information.

When Power Saving Mode is active, the watch displays:

- Time
- Steps
- Battery level

Exit Power Saving Mode

To exit Power Saving Mode, press and hold the **top button for 5 seconds**.

The watch will return to its normal interface.