



[Knowledgebase](#) > [Smartwatches](#) > [Reebok Stride Troubleshooting and Information](#) > [Charging & Battery](#) > [How to Use Power Saving Mode on Your Reebok Stride](#)

How to Use Power Saving Mode on Your Reebok Stride

Inas B. - 2026-09-17 - [Charging & Battery](#)

Power Saving Mode helps extend your watch's battery life by limiting the information displayed on the screen.

When Power Saving Mode is enabled, the display shows:

- Time
- Steps
- Battery level

Exit Power Saving Mode

Press and hold the **top button for 5 seconds** to exit Power Saving Mode.