



[Knowledgebase](#) > [Smartwatches](#) > [Reebok Rush Troubleshooting and Information](#) > [Troubleshooting & Performance](#) > [Troubleshooting Touchscreen & Water Issues on Your Reebok Rush](#)

Troubleshooting Touchscreen & Water Issues on Your Reebok Rush

Inas B. - 2026-09-21 - [Troubleshooting & Performance](#)

If the touchscreen does not respond correctly:

- The touchscreen may not function properly when the watch is wet, especially during prolonged contact with water.
- Dry the watch completely before using the touchscreen.
- Always make sure the watch is completely dry before connecting it to the charger.