



[Base de connaissances](#) > [Montres Connectées](#) > [Dépannage et Informations - Reebok Rush](#) > [Configuration & Appairage](#) > [How to Manage System Settings and Your PIN on Your Reebok Rush](#)

How to Manage System Settings and Your PIN on Your Reebok Rush

Inas B. - 2026-10-22 - [Configuration & Appairage](#)

The System menu on your Reebok Rush provides options for restarting, powering off, and resetting the watch.

Restart or Power Off

Open the **System** menu to restart or power off your watch.

Reset Your Watch

A factory reset erases all data stored on the watch and restores it to its original settings.

After a reset, you must pair the watch with the Reebok Connect app again.

Set a 6-Digit PIN

You can enable a 6-digit PIN to help protect your watch when it is removed from your wrist.

Forgotten PIN

If you forget your PIN, entering an incorrect PIN **5 consecutive times** will trigger a factory reset.

A factory reset erases all data stored on the watch, and you will need to set it up and pair it again.